

# SKF Shaft Alignment Tool Values app

---





# Table of contents

- 1. Using the Values app ..... 2
  - 1.1 How to change the app language .....2
  - 1.2 Main menu .....3
  - 1.3 Settings .....4
  - 1.4 Select units.....5
  - 1.5 Machine information.....6
  - 1.6 Sensor status .....7
  - 1.7 Measuring and correction .....8
  - 1.8 Report .....9
  - 1.9 Machine library ..... 10

## 1. Using the Values app

“SKF Shaft alignment”



SKF Shaft Alignment Tool  
Values app

### 1.1 How to change the app language

The app will adapt to the language and date format currently used by the operating device.

- To change the language of an iOS device, tap:  
*Settings --> General --> Language & Region*
- To change the language of an Android device:
  1. Open the **Settings** app.
  2. Under **Controls** tab, select **Language and input**.
  3. Tap on **Language English**.
  4. Select your preferred language.
  5. The tablet switches immediately to the new language.

**NOTE:** The alignment apps are available in 8 languages. The app uses the same language that is used as the system language of the TKSA DISPLAY.

If the app does not support the selected language, English is used as the default alternative.

## 1.2 Main menu

Start the app by tapping on the *Values app icon*, found on the home screen of the device. This will take you to the main menu.

**IMPORTANT:** Make sure you have read the instructions for use for your TKSA hardware.

### a. Resume

If you have an ongoing alignment you will find it to the left in the main menu, with the possibility to resume it.

### b. New alignment

Tap on the *plus sign* (“+”) to start a new alignment. If an alignment is in progress you will be asked if you want to start a new alignment or resume the current one.

### c. Settings

Access the editable settings.

### d. Machine library

Access the library for machines and reports.

### e. Help



Access help videos and the Instructions For Use document.

### f. Edit

The reports can be deleted via Edit, which is located in the upper right corner of the view. Delete reports by tapping on *Edit*, then tap the *reports* to be deleted and finish by tapping the *trash can* symbol in the upper left corner of the view.

### g. Reports

Previously created reports are shown as miniatures below the main menu buttons. Tapping a *report* will open it for viewing, editing, printing and e-mailing.

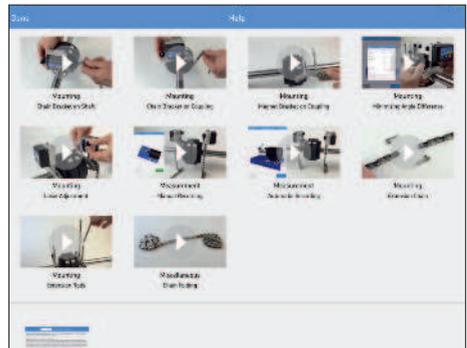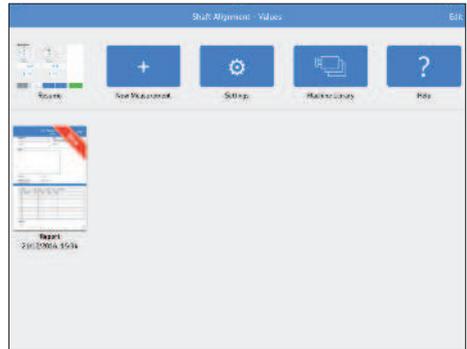

## 1.3 Settings

### a. Report template

Company, Operator and Logo is additional information that is included in generated reports.

### b. Angular error

Angular Error expressed as /100mm [mils/"] or as coupling gap. For gap, specify the Coupling Diameter when entering the Distances in the Machine Information view.

### c. Sensor values

Sensor values is an option to display the detector readings and rotational angles during the measurement.

### d. Measurement options

Enable Automatic Measuring

Measuring procedure without manually tapping the *record button*. It lets you bypass the need to manually tap the *record button* for the second and the third measurement.

Use Fixed Angles

Measuring procedure with three fixed positions each separated 90°. It lets you measure without use of the angular sensors.

### e. Extended filter length

Measurement values are filtered over time, allowing accurate measurements in the presence of external disturbances, for instance laser beam deflection due to air disturbances. The Extended filter length option enables the sample time to be increased up to 20 seconds.

### f. Hardware


The connected measuring units. Tap *Select Hardware* if you want to select other units.

### g. Unit

For the ability to change between metric and imperial measuring units. The displayed unit is normally based on the system unit, but you can override this and change between metric and imperial units.

### h. Done

Complete any changes in Settings by tapping *Done*.

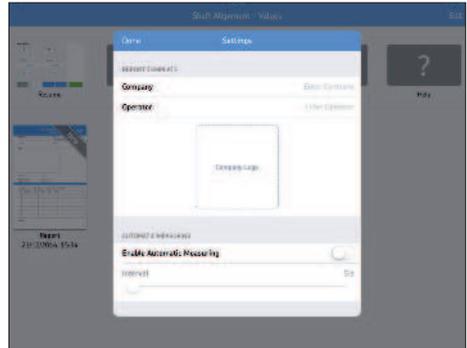


## 1.4 Select units

The Bluetooth wireless communication will establish a connection between the device and the two measuring units. You will be informed if there is a need to turn on Bluetooth on the device.

**NOTE:** That the first time, you have to select the measuring units that you want to use in the system. Connect to the measuring units by tapping one *S* (*stationary*) unit and one *M* (*movable*) unit in the lists. The app will remember your chosen measuring units and will attempt to connect to these units at your next alignment.

The app features a Demo Mode which allows most functionalities to be tested without having physical measuring units available. The Demo Mode option is found at the bottom of the Select Units view.

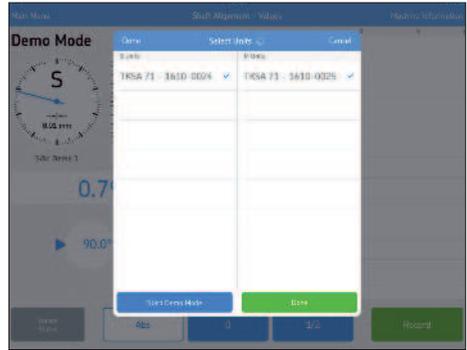

## 1.5 Machine information

The Machine Information view is displayed when a new measurement has been initiated. The view is also reachable from the upper right corner of the screen while recording data in the three measurement positions.

### a. Search

Tap the *magnifying glass* to search for machines in the library.

### b. QR code scan

Tap the *QR code icon* to scan for codes that are associated with machines in the library. If found, the machine info will be filled out for that machine.

### c. Machine ID

Enter a machine name that will be the identification of the machine.

The Machine ID can be associated to a QR code.

Tap *Add QR code* and scan the label with the camera. For a machine ID that is associated with a QR code you have the possibility to remove the QR code.

### d. Machine photo

Add a photo to be associated with the machine (optional).

### e. Tolerances

The built-in tolerance values can be used based on the RPM speed of the machine you are aligning. Select the appropriate tolerances by tapping the *row in the table* or choose *custom tolerance values* by tapping *Custom*.

### f Report information


Enter a report name that will be the identification of the report.

Add up to four Report Photos that will be added to the last page of the report.

There are three methods to calculate the target values. At each of the methods tapping the *button Calculate Target Values* will override and set the values for offset and angles in Target Values.

### g. Done


Complete any changes in Machine Information by tapping *Done*.

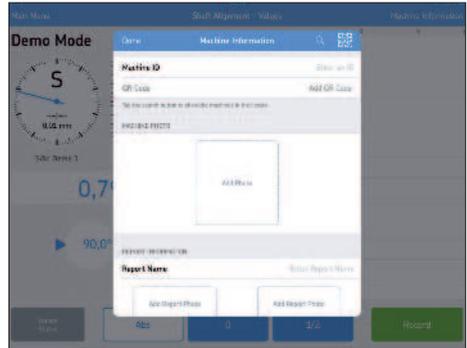

## 1.6 Sensor status


The Sensor Status appears if you have a warning or stop issue during the setup. It also appears if you tap the *warning / stop sign* or the Sensor Status button in the lower left corner of the screen during a measurement.

If a warning appears, Setup Assistance at the bottom of the view provides help to correct any issues. Warning signs can be ignored, but a stop sign is shown when it is not possible to read essential sensor values.

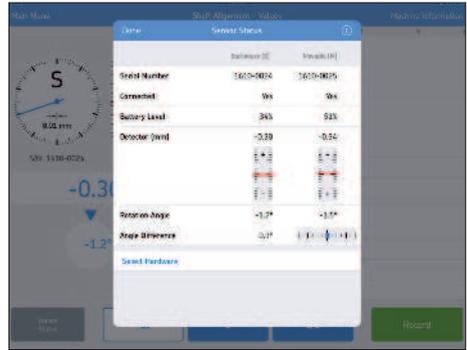

Warnings are shown when:


- Battery level is below 10% of full charge.
- Laser beam is more than 2 mm [80 mils] from the center target during the setup.
- Laser beam is too close to the edge of the detector.
- Rotational angle difference is more than 2° between measuring units.

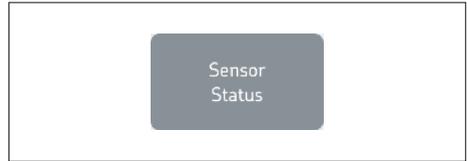

Stops signs are shown when:

- There is no Bluetooth connection.
- No laser beam is detected.

**TIP:** The Sensor Status can be used to review temporary data, on the detector values and the rotation angles, during the measurement. When the results are shown, lasers are turned off and no detector values are available in this view.

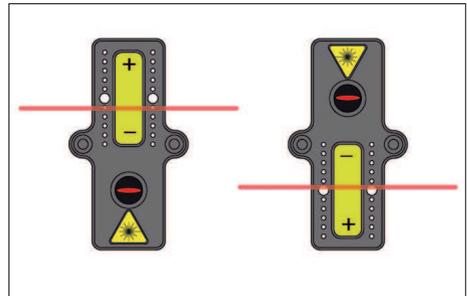

### a. Serial number and connected status

Serial number and connected status indicate if any measuring units are connected.

### b. Battery level

Indicates the charge levels for the internal batteries.

### c. Detector


The detector values show the distances between the center of the detectors and where the laser beams hit the detectors.

### d. Rotational angle and angle difference

The rotational angles and angle differences can be used for precise positioning of the two facing measuring units.

### e. Select hardware

Lists the connected measuring units. Tap *Select Hardware* if you want to select other units.

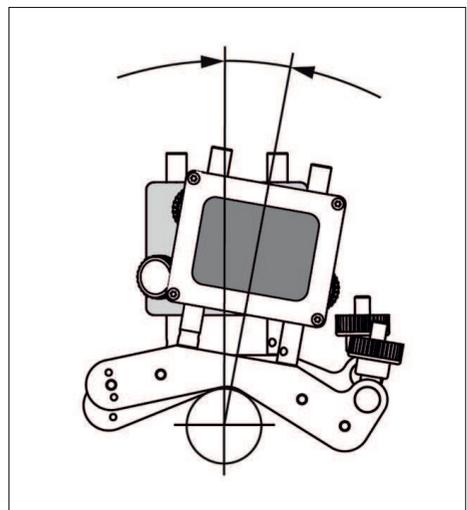

#### f. Done

When no warnings are displayed tap *Done* to proceed to the measurement.

### 1.7 Measuring and correction

The Display shows readings from the S and M measuring units in both numerical and graphical form. Relative measurements can be done by tapping the “0” button at the bottom of the screen. The “1/2” button halves the values, and the “Abs” button restores to absolute values. If a tolerance is set, the range will be shown in the laser detector representation as a green area that corresponds to “within tolerance”.

#### Manual recording

Tapping the “record” button saves the current values for S and M to the list on the right side of the screen.

#### Automatic measurements

When automatic measuring is enabled (see the settings section to read more about enabling this option), tapping the “record” button starts the automatic measuring. Recording goes on until the button is tapped again.

#### Shaft alignment measurement procedure

Shaft alignment will be performed by using the same method as for dial indicators.

After a setup (see 2.1), position the two measuring units in the same rotational angle. Tap the “0” button to set the values to zero.

Rotate the shafts half a turn (180°). The values are now twice the amount that the centrelines of rotation are actually out. Halve the values by tapping the “1/2” button. Confirm the readings by tapping the “record” button and rotating the shafts another 180°. Watch the values and check that they are about the same as the recorded values but opposite in sign.

#### Measuring result

The values now show the amount of misalignment (offset in planes of the detectors) at any point around the shafts, in the same rotational angle as measuring units are positioned.



#### Correction

The correction works on most types of shaft-to-shaft installations, regardless of orientation and dimensions. Position the measuring units in the direction of adjustment.

Move the machine and observe the values.

Move the machine towards zero values.

Move the front end while watching the M-unit value and move the rear end while watching the S-unit value.

Repeat for the other direction (90° from the first).



## 1.9 Machine library

The Machine library is a convenient way to search and select previously measured machines and reports.

### a. Machine library

Displays a list with Machine ID and the Reports from previously measured machines.

### b. Search

Tap the *search field* to sort out the Machine ID's in the list.

### c. Machine info

Select a Machine ID to view the corresponding machine info.

### d. New alignment

Tap to use the shown machine info as a *template for a new measurement*.

### e. List of reports



Tap the *number of reports* to display a list with corresponding reports with the date for each report.

### f. Report

Select a report to view it.

### g. Share report

While viewing a report it is possible to share it through for instance email or by printing it. The sharing functionality is available in the upper right corner of the view.

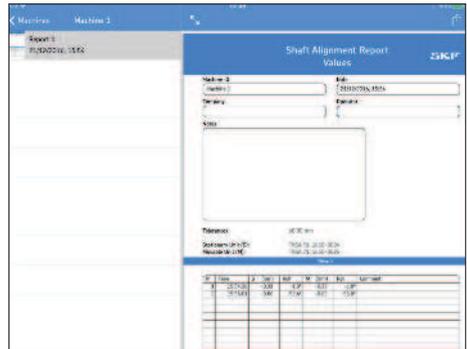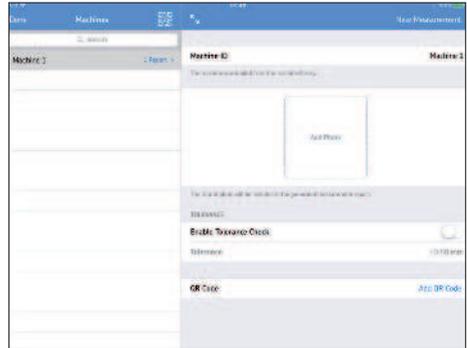







[skf.com](http://skf.com) | [mapro.skf.com](http://mapro.skf.com) | [skf.com/mount](http://skf.com/mount) | [skf.com/alignment](http://skf.com/alignment)

© SKF is a registered trademark of the SKF Group.  
App Store is a service mark of Apple Inc. registered in the US and other countries.  
Android and Google Play are trademarks of Google Inc.

© SKF Group 2018

The contents of this publication are the copyright of the publisher and may not be reproduced (even extracts) unless prior written permission is granted. Every care has been taken to ensure the accuracy of the information contained in this publication but no liability can be accepted for any loss or damage whether direct, indirect or consequential arising out of the use of the information contained herein.

MP5470 EN · 2018/04